


The new HSCB engineered mounting system provides secure attachment of a heat sink to the circuit board while providing firm contact to the chip component allowing optimum heat dissipation. The three-piece fastening system, sold individually, includes the screw, spring and receptacle nut. The clamp load created is determined by the spring rate and the amount of deflection that is designed into the joint of the hardware. The system also

allows for slight expansion and contraction of the joint components without stress to the delicate circuitry. The unique "click" feature lets the user know when the fastener is completely installed.

Features and Benefits

- Screw can not be overtightened. Audible "click" when fully engaged.
- Screw and spring mount together permanently into the heat sink.
- Spring determines clamp force.
- Receptacle nut mounts permanently to the PC board.
- Provides even, constant contact of heat sink to chip component.
- · Allows removal of heat sink if desired.

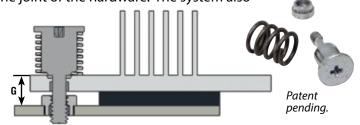


To select proper length code of nut/standoff:

- 1) Determine "G", the distance from the top surface of the heat sink to the top of the P.C. Board.
- 2) Find the combination of Screw (HSCB) and Nut (HSR) whose sum of Screw Factor (SF) plus Nut Factor (NF) are closest to G.
- 3) Find D = G SF NF. The D value must be a negative number between zero and 1mm or 1/32" (1 dash length of HSR nut).
- 4) The actual working load is equal to the Spring (HSL) Working Load + (D x spring rate k). Lower D value results in lower force.

If this does not meet your application needs, contact our PEM Technical Support group at techsupport@pemnet.com to develop a special product that matches your specific application.

TYPE HSCB™ SELF-CAPTIVATING SCREW



Threads: External, ASME B1.1, 2A / ASME B1.13M, 6g ⁽¹⁾
Material: Hardened Carbon Steel
Finish: ZI - Zinc plated, 5µm, colorless ⁽²⁾

For Use In Sheet Hardness: HRB 80 / HB 150 or less (3)

NOTE: HSCB screws, HSR nuts and HSL springs are sold separately.

Phillips driver size. (See chart) H2 Ts

All dimensions are in inches.

I E D	Thread Size	Туре	Thread Code	Length Code "L" ±.015	Min. Sheet Thickness	Hole Size in Sheet +.003000	Es ±.010	H ₁ Ref.	H ₂ Ref.	Ts Min.	Screw Factor (SF)	Driver Size	Min. Dist Hole ⊈ To Edge
I L L	.112-40 (#4-40)	HSCB	440	4	.040	.112	.312	.300	.470	.130	.170	#1	.156
	.138-32 (#6-32)	HSCB	632	4	.040	.138	.352	.300	.470	.130	.170	#2	.178


All dimensions are in millimeters.

TRIC	Thread Size x Pitch	Туре	Thread Code	Length Code "L" ±0.4 8.13	Min. Sheet Thickness	Hole Size in Sheet +0.08	Es ±0.25	H ₁ Ref.	H ₂ Ref.	Ts Min.	Screw Factor (SF)	Driver Size	Min. Dist Hole ⊈ To Edge
M	M3 x 0.5	HSCB	M3	3	1	3	8.18	7.67	12	3.3	4.32	#1	4.13

- (1) As with all Class 2A/6g external threads with an additive finish, the maximum major and pitch, after plating, may equal basic sizes and be gauged to Class 3A/4h, per ANSI B1.1, Section 8, Table 3A and ANSI B1.13M, Section 8, Paragraph 8.2.
- (2) See PEM Technical Support section of our web site (www.pemnet.com) for related plating standards and specifications.
- (3) HRB Hardness Rockwell "B" Scale. HB Hardness Brinell.



TYPE HSR™ BROACHING NUT/STANDOFF





Threads: Internal, ASME B1.1, 2B / ASME B1.13M, 6H

Material: Carbon Steel

Finish: ET - Electro-plated Bright Tin ASTM B 545, Class B With Clear Preservative Coating (1)

For Use In Sheet Hardness: HRB 60 / HB 107 or less (2)





All dimensions are in inches.

ED	Thread Size	Туре	Thread Code	Length Code	A (Shank) Max.	Min. Sheet Thickness	Hole Size In Sheet +.003 –.000	C ±.003	En ±.005	F ±.010	T _N ±.005	Nut Factor (NF)	Min. Dist. Hole © To Edge							
Ξ	.112-40	HSR	440	2	.060	.060	.166	.184	.219	.060	.065	.000	0.17							
Z	(#4-40)	11011	440	3	.000	.000	.100	.104	.213	.000	.093	.031	0.17							
_	.138-32	HSR	632	2	.060	.060	.213	221	.281	.060	.065	.000	0.22							
	(#6-32)	Hon	032	3	.000	.000	.213	.231 .201	.231 .281 .06	.213 .231 .281	.231 .		.231	.201	.201	.281 .060	201 .000	.093	.031	0.22

All dimensions are in millimeters.

i	TRIC	Thread Size x Pitch	Туре	Thread Code	Length Code	A (Shank) Max.	Min. Sheet Thickness	Hole Size In Sheet +0.08	C ±0.08	En ±0.13	F ±0.25	T _N ±0.13	Nut Factor (NF)	Min. Dist. Hole © To Edge
	M M	M3 x 0.5	HSR	M3	2	1.53	1.53	4.22	4.68	5.56	1 2	2	.75	4.4
'	_	IVIO X U.J	11011	IVIO	3	1.00	1.55	4.22	4.00	3.30	1.3	3	1.75	7.7

NOTE: HSCB screws, HSR nuts and HSL springs are sold separately.

- (1) See PEM Technical Support section of our web site (www.pemnet.com) for related plating standards and specifications.
- (2) HRB Hardness Rockwell "B" Scale. HB Hardness Brinell.

TYPE HSL™ SPRINGS


HSL springs are engineered to provide a reliable and repeatable spring rate when assembled with mating PEM hardware. The spring rate is critical to the successful assembly of your heat sink. Clamp load will be determined by the spring rate and deflection that is designed into the joint.

Part		mum e Dia.		d at eight ±10%		king It Ref.	Sprin	g Rate K	Spring
Number	(in.)	(mm)	(lbs.)	(N)	(in.)	(mm)	(lb/in)	(N/mm)	Material
HSL-574-35	.226	5.74	7.87	35	.270	6.86	74	12.96	17-7 Stainless Steel
HSL-701-35	.276	7.01	7.87	35	.270	6.86	39	6.84	17-7 Stainless Steel

Working Height

Sprina I.D.

NOTE: HSCB screws, HSR nuts and HSL springs are sold separately. HSL-574-35 spring fits screw thread sizes #4-40 and M3 and HSL-701-35 spring fits screw thread size #6-32.



The HSL **Inside Diameter Code** is expressed in hundredths of millimeters. Example "574" indicates a minimum inside diameter of 5.74mm or .226".

The HSL **Load Code** is expressed in Newtons developed at the working height of the spring once the joint is assembled. Example "35" indicates working load of 35 Newtons, or approximately 8 lbs.

For designs requiring a specific spring rate, contact our PEM Technical Support group at techsupport@pemnet.com



INSTALLATION

Type HSCB fastener into heat sink


- 1. Prepare properly sized mounting hole in heat sink. Do not perform any secondary operations such as deburring. If the hole is punched, be sure to install the fastener into the punch side of the hole.
- 2. Place the head of the screw into the recess of the installation anvil.
- 3. Place the spring over the shoulder of the screw, maintaining concentricity.
- 4. Position the heat sink mounting hole over the screw.
- 5. Bring the heat sink down over the screw and onto the shoulder of the
- 6. With the punch and anvil surfaces parallel, apply a squeezing force to the heatsink and the head of the screw. The squeezing action forces the displacer of the screw into the heatsink, causing it to reduce the mounting hole diameter and captivate the screw and spring.

C PÚŃCH ANVIL **AFTER** .250" ±.005/ 6.35mm ±0.13 ANVIL

PEMSERTER® Installation Tooling For HSCB Screw

: D	Thread	Installation Toolin	g Dimensions (in.)	Anvil	Punch
#	Code	C	J	Part Number	Part Number
UNIFIED	440	.113116	.322324	8018043	970200006300
	632	.139142	.362364	8018044	970200007300

TRIC	Thread Code	Installation Tooling	Dimensions (mm)	Anvil	Punch	
		C	J	Part Number	Part Number	
METF	M3	3.03 - 3.11	8.43 - 8.48	801845	970200229300	




Type HSR nut/standoff

- 1) Prepare properly sized mounting hole in board.
- 2) Place fastener into the anvil hole and place the mounting hole over the shank of the fastener as shown in drawing.
- 3) With installation punch and anvil surfaces parallel, apply squeezing force until shoulder contacts the board.

PEMSERTER® Installation Tooling For HSR Nut

D		Anvil Dime	nsions (in.)	<u>. </u>		
H	Thread Code	Α	P ±.005	Anvil Part Number	Punch Part Number	
E	HSR-440	.228231	.115	975200846300	975200048	
Π	HSR-632	.290293	.115	975200849300	975200048	

) I		Anvil Dimensions (mm)			
ETRI	Thread Code	А	P ±0.13	Anvil Part Number	Punch Part Number
M	HSR-M3	5.8 - 5.86	2.92	975200846300	975200048

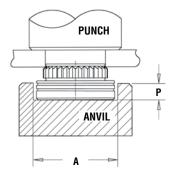

Final assembly

Once the screw and spring are captivated, assemble the heat sink to the circuit board by tightening the screw into the receptacle nut or standoff until the audible "click" is heard. The screw will continue to rotate, but will no longer be engaged in the threads or continue to actively tighten.

PERFORMANCE DATA(1)

Type HSCB (screw)

				Test Shee	t Material	
Q	Tuna	Throad	Aluminum Cold-rolled Sto		ed Steel	
NIFIE	Туре	Thread Code	Installation (lbs.)	Pushout (lbs.)	Installation (lbs.)	Pushout (Ibs.)
	HSCB	440	1900	60	2600	80
	HSCB	632	2000	90	3500	120

				Test Shee	t Material		
RIC	Туре	Thread Code	Alum	inum	Cold-rolled Steel		
METR			Installation (kN)	Pushout (N)	Installation (kN)	Pushout (N)	
_	HSCB	M3	8	265	12	355	

Type HSR (nut)


			Test Shee	t Material				
Ω	Type	Thread	.060" FR-4 Panel					
FIE		Code	Installation (lbs.)	Pushout (lbs.)				
- N O	HSR	440	400	65				
	HSR	632	500	80				

METRIC	Туре	Thread Code	Test Sheet Material	
			1.5mm FR-4 Panel	
			Installation (kN)	Pushout (N)
	HSR	М3	2.2	290

- (1) Unless specified, performance values reported are averages when all installation specifications and procedures are followed. Variations in mounting hole size, sheet material and installation force will affect results. Performance testing of this product in your application is recommended. We will be happy to provide samples for this purpose.
- (2) Torque values shown will produce a preload of 70% minimum tensile (125 ksi / 935 MPa) with nut factor "k" equal to .1


VALUE-ADDED CAPABILITIES

Low-profile Designs

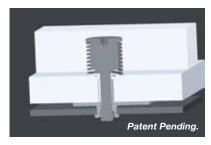

For low-profile designs, install a custom
PennEngineering
broaching or surface
mounted nut on the
bottom of the circuit
board.

Using a Standoff as the Receptacle

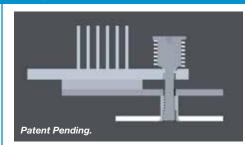

Variations in design can include using a custom PennEngineering standoff as the receptacle for the screw.





Regulatory compliance information is available in Technical Support section of our website. © 2013 PennEngineering.

Specifications subject to change without notice. See our website for the most current version of this bulletin.

PennEngineering®



North America: Danboro, PA USA • E-mail: info@pemnet.com • Tel: +1-215-766-8853 • Fax: +1-215-766-0143 • 800-237-4736 (USA Only) Europe: Galway, Ireland • E-mail: europe@pemnet.com • Tel: +353-91-751714 • Fax: +353-91-753541

Asia/Pacific: Singapore • E-mail: singapore@pemnet.com • Tel: +65-6-745-0660 • Fax: +65-6-745-2400 Shanghai, China • E-mail: china@pemnet.com • Tel: +86-21-5868-3688 • Fax: +86-21-5868-3988

Visit our PEMNET™ Resource Center at www.pemnet.com

Technical support e-mail: techsupport@pemnet.com